



100 Hancock Ave
Hamilton, Ohio 45011

www.jetstream-usa.com
800-524-4889

Specifications:


25-1300 MHz Discone type antenna
Transmit on 26-27-46-49-72-144-220-440-900-1290 MHz
Impedance: 50 ohms
Max power: 200 watts, sum of all bands
Connector: SO239
Mast size: 1 $\frac{1}{4}$ inch

Adjustment

The JTD2 antenna is pre-tuned at the factory and should not require any tuning.
The antenna needs to be out in free space. It should not be

Assembling the JTD2.

1. Screw in all 8 small radials to the threaded holes in the top of the base. These should be horizontal. Then tighten the nut on each radial.
2. Screw in all 8 large radials to the threaded holes in the bottom of the base. These should come down at an angle. Then tighten the nut on each radial.
3. Insert whip into coil. Tighten set screw.
4. Thread your coax through your 1 $\frac{1}{4}$ " mast.
5. Screw your PL259 into the SO239 on the base of the coil.
6. Insert mast pipe into the base
7. Tighten allen type screws to the mast pipe

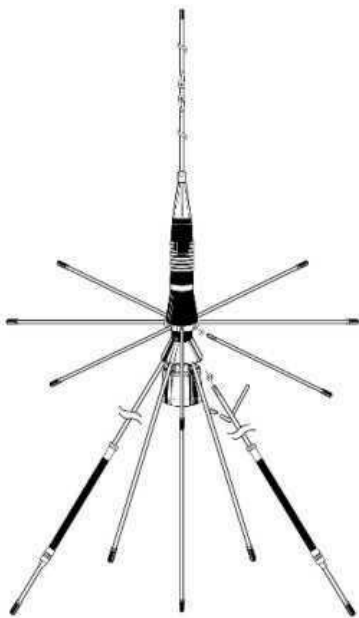

Instructions for JTD2

Safety Instructions:

Do not install on a rainy or windy day
Do not install near power lines.
Do not install by yourself, always have someone else nearby to help.
If antenna comes in contact with electric lines, do not try to remove. Call your electric company immediately.
If you do not have experience at installing antennas seek the

Recommended Accessories for the JTD2 antenna:

Lightning arrestor: **Jetstream JT40R**

Coax:

Less than 50 ft: **Jetstream JT2008**

More than 50 ft: **Jetstream JT2013, JT2015 or JT2015F**

Coaxial Switch: **Jetstream CO201**

Optional Accessories



Lightning Arrestor



Coax Switch

www.jetstream-usa.com
800-524-4889